

User Manual

Activa SmartMop



PURPOSE AND CONTENT OF THE MANUAL

The aim of this manual is to provide customers with all the information needed to use the appliance in the safest, most appropriate and most autonomous way. It includes information concerning technical aspects, safety, operation, appliance downtime, maintenance, spare parts and scrapping . Operators and qualified technicians must read the instructions in this manual carefully before carrying out any operation on the appliance. If in doubt about the correct interpretation of instructions, contact your nearest Customer Service Centre obtain the necessary clarifications.

TARGET GROUP

This manual is aimed at operators and qualified technicians responsible for appliance maintenance. Operators must not perform operations that should be carried out by qualified technicians. CLEANWILL cannot be held liable for damages resulting from failure to comply with this prohibition.

STORING THE USE AND MAINTENANCE MANUAL

The Use and Maintenance Manual must be stored in its special pouch close to the appliance, protected from liquids and anything else that could compromise its legibility.

ON DELIVERY OF THE APPLIANCE

When the machine is delivered to the customer, an immediate check must be performed to ensure all the material mentioned in the shipping documents has been received, in addition to verifying that the equipment has not been damaged during transportation. If this is the case, the carrier must ascertain the extent of the damage at once, informing our customer service office. It is only by prompt action of this type that the missing material can be obtained, and compensation for damage successfully claimed.

INTRODUCTORY COMMENT

Any type of equipment can only work properly and effectively if used correctly and kept in full working order by performing the maintenance operations described in the attached documentation. You should therefore read this instruction manual carefully , consulting it again if issues arise while using the machine. If necessary, remember that our assistance service (organised in collaboration with our dealers) is always available for advice or direct intervention.

IDENTIFICATION DATA

For technical assistance or to request replacement parts, always give the model, the version and the serial number (written on the relevant plate).

TECHNICAL DESCRIPTION

The CLEANWILL is a scrubbing machine that cleans a wide range of flooring and dirt types by means of the mechanical action of the discoidal brush and the chemical action of a water-detergent solution . As it advances, it collects the dirt that has been removed and the detergent solution that has not been absorbed by the floor.The appliance must only be used for this purpose .

INTENDED USE

This scrubbing machine was designed and built for the cleaning (scrubbing and drying) of smooth, compact flooring in the commercial, residential and industrial sectors by a qualified operator in proven safety conditions. The scrubbing machine is not suitable for cleaning rugs or carpets. The appliance is only suitable for use in indoor - or at least covered - areas.

 **ATTENTION:** the appliance is not suitable for use in the rain,or under jets of water.
IT IS FORBIDDEN to use the appliance for picking up dangerous dusts or inflammable liquids in places with an explosive atmosphere. In addition, it is not suitable as a means of transport for people or objects.

SAFETY

Operator cooperation is paramount for accident prevention. No accident prevention programme can be effective without the full co-operation of the operator who is directly responsible for machine operation. The majority of occupational accidents that happen both in the workplace or whilst moving are caused by failure to respect the most basic safety rules. An attentive, careful operator is most effective guarantee against accidents and is fundamental in order to implement any prevention programme.



SERIAL NUMBER PLATE

The serial number plate is located inside the device on the underside of the front housing, and indicates the general appliance characteristics (in particular, the serial number). The serial number is a very important piece of information and should always be provided together with any request for assistance or when purchasing spare parts.

TECHNICAL DATA		U/M	XD209
Total power	W	150	
Working width	mm	350	
Suction width	mm	422	
Brush(diameter×length)	Ø mm×mm	110×352	
Brush speed	rpm	350	
Brush motor(rated)	V/W	24/32	
Vacuum motor(rated)	V/W	24/100	
Solution tank capacity	l	2	
Recovery tank capacity	l	1.5	

TECHNICAL DATA		U/M	XD209
Rated battery voltage	V/mAh	24/ 6000	
Weight	kg	10	
Air flow	L/S	14.66	
Noise	dB(A)	<70	
Fully charging time	h	1.5	
Running time	min	60	
Vacuum degree	kPa	4	
Product size	mm	406× 447×230	

SPARE PARTS

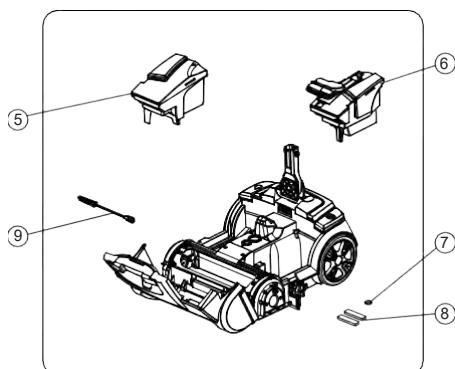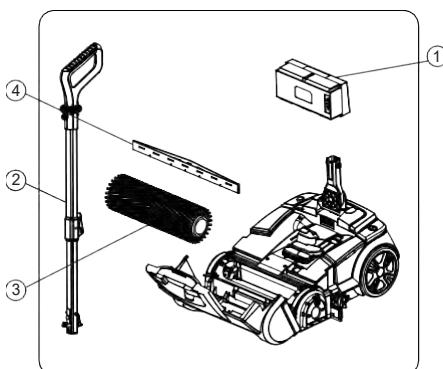

POS	QTY	DESCRIPTION
1	1	BATTERY
2	1	CONTROL HANDLEBAR
3	1	BRUSH
4	1	SQUEEGEE RUBBER KIT

POS	QTY	DESCRIPTION
5	1	SOLUTION TANK
6	1	RECOVERY TANK
7	1	CLEAN WATER FILTER
8	2	ANTI-DUST FILTER
9	1	TUBE-CLEANING BRUSH

HOW TO UNPACK THE APPLIANCE

The procedure for removing the device from its packaging is the following:

1. Place the lower part of the outer packaging in contact with the floor.
- ATTENTION:** use the pictograms printed on the box as a reference.
2. Open the outer box.
3. Remove the accessories from the box and carefully lay them on the ground.

4. Take the appliance out of the box.

ATTENTION: it is recommended that all the packaging components be kept for any future transportation of the appliance.

ATTENTION: these operations must be carried out using protective gloves to avoid any possible contact with the edges or tips of metal objects.



HOW TO TRANSPORT THE APPLIANCE

The procedure for the safe handling of the device is the following:

1. If the appliance is working ,turn it off via the main switch(1) (Fig. 1).
2. Make sure the recovery tank is empty . If it isn't , empty it completely.
3. Make sure the solution tank is empty . If it isn't , empty it completely.
4. Remove the power battery (2) from the appliance . To free the battery, shift the stop lever (3) in the direction of the arrow (Fig.2).

5. Remove the battery from the appliance using the handle moulded on it (Fig.3).
6. Block the handlebar in the horizontal position . Rest your foot on the main part of the appliance to prevent it from tilting, then push the handle away from you until it snaps into the horizontal position (Fig.4).





ATTENTION: do not rest your foot on the main switch.

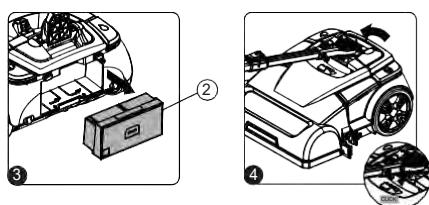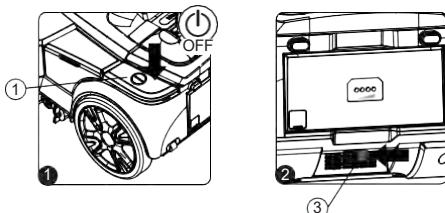

7. Rotate the stop lever of the command handlebar (4) in the direction of the arrow (Fig.5).
8. Close the command handlebar, pushing the handle (5) towards the main part of the appliance(Fig.6).
9. Rotate the stop lever of the command handlebar (4) in the direction of the arrow (Fig.7).
10. To raise the device off the floor, use the handle (6) on its rear (Fig.8).

ATTENTION: when transporting the appliance on vehicles, secure it firmly in place in accordance with the directives in force so that it cannot slide or tip over.

ATTENTION: these operations must be carried out using protective gloves to avoid any possible contact with the edges or tips of metal objects.

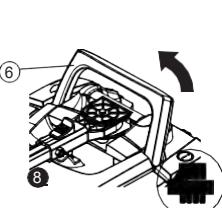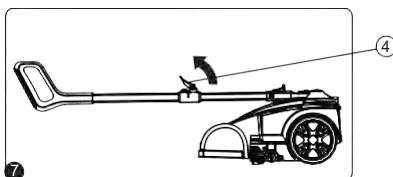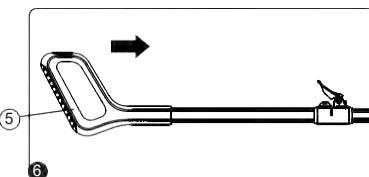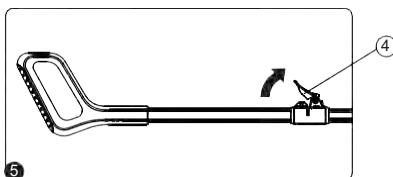

BATTERY TYPE

To power the appliance, use only the battery supplied in the package or by a specialised technician.

OTHER BATTERY TYPES CANNOT BE USED.

The appliance is powered by a lithium-ion battery. The battery compartment can accommodate a single battery slot at 24V.



ATTENTION: for the maintenance and disposal of the battery read the document supplied by the battery manufacturer.

RECHARGING THE BATTERY

The battery must be charged prior to the first use, and when it doesn't provide enough power for tasks that could formerly be performed without difficulty. To recharge the battery, proceed as follows:

1. Take the appliance to the dedicated battery recharging area.

ATTENTION: the room where the batteries are recharged must be adequately ventilated to prevent the accumulation of gases that leak from batteries.

2. If the appliance is working, turn it off via the main switch (1) (Fig. 1).

3. Block the handlebar in the vertical position.

ATTENTION: during this operation, do not rest your foot on the appliance .

4. Read the battery charger manual (supplied with the device)

before inserting the power plug (2) in the power supply unit (3) (Fig.2).



ATTENTION: before connecting the battery charger to the socket, make sure the characteristics of the mains supply correspond to those of the battery charger.






ATTENTION: the battery charger must only be used in a covered place.

5. Connect the power plug (2) to the mains supply.



ATTENTION: make sure the green LED (4) on the battery charger lights up when you enable the battery charger base circuit (Fig.3). This LED indicates that the charger circuit is correctly powered.

6. Remove the cap (3) covering the battery power socket (Fig.3).

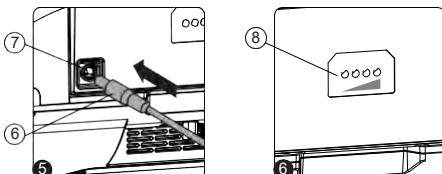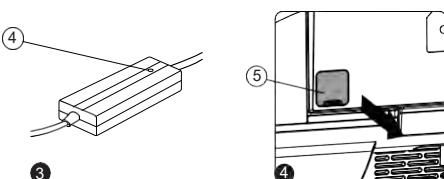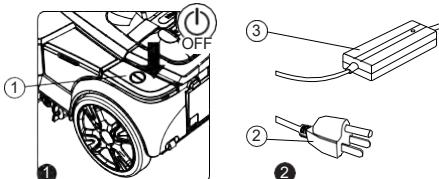

7. Insert the battery charger power cable plug (6) in the socket (7) on the battery (Fig.5).

ATTENTION: make sure the green LED (4) on the battery charger lights up when you enable the charger (Fig.3). This LED indicates that the charger circuit is correctly powered.

ATTENTION: before inserting the plug (6) in the socket (7), make sure the battery charger housing compartment is not dirty (dust, condensation or other types of liquid).

ATTENTION: make sure the red LED (4) on the battery charger lights up when you insert the plug (6) in the socket (7). This LED indicates that the battery is recharging.

8. Perform a complete battery charging cycle.

ATTENTION: the red LED (4) remains on until the battery is fully charged. When the recharging cycle has ended, the red LED goes off and the green LED comes on.



ATTENTION: the charger and the battery can be left connected to the power socket. The red LED (4) lights up when the charger occasionally tops up the battery.



ATTENTION: the red charge status LED (4) does not provide any indication of the battery charge level.



ATTENTION: during the charging phase, the battery may overheat. This is normal and does not mean there is any problem with the battery.



ATTENTION: if the battery used in this appliance is overcharged, there may be a risk of fire, explosion or chemical burns.

- Once the charging cycle is completed (the green LED (8) fully lights up), remove the plug (2) on the battery charger from the mains socket (Fig.6).

ATTENTION: to prevent any damage to the mains socket, pull directly on the plug (not on the cable) when taking it out.


- Take the power cable plug (6) out of the socket (7) on the battery.

- Insert the cap (5) that covers the battery power socket.


PREPARING THE APPLIANCE

- Take the package to the dedicated maintenance area.
- Remove the appliance and all the accessories from the box.
- Insert the lower tube (1) of the control handlebar in the hole on the joint (2) (Fig.1).
- Fix the handlebar to the joint using the screw and nut (3), making sure the hole on the handlebar coincides with the hole on the joint (Fig.2).


ATTENTION: the screwdriver is not supplied.

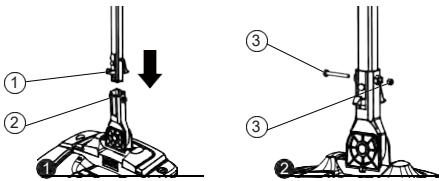

- Rotate the stop lever of the handlebar (4) in the direction of the arrow (Fig.4).

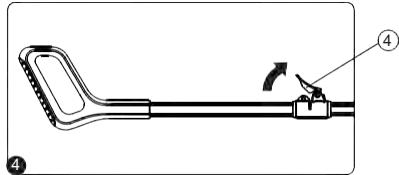


- Rotate the stop lever of the handlebar (4) in the direction of the arrow (Fig.6).

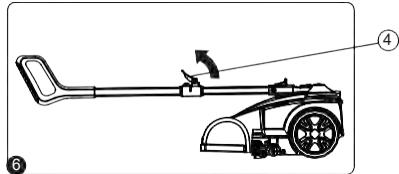


- Block the handlebar in the horizontal position. Rest your foot on the main part of the appliance to prevent it from tilting, then push the handle away from you until it snaps into the horizontal position (Fig.3).


ATTENTION: do not rest your foot on the main switch.

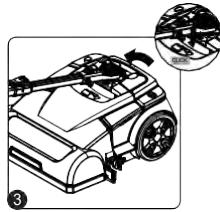

- Close the command handlebar, pushing the handle (5) towards the main part of the appliance (Fig.5).

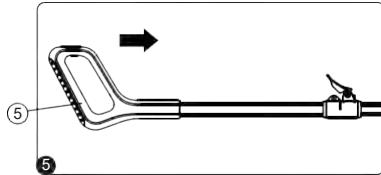

- Insert the battery (6) in the battery-holder compartment (7) in the rear part of the appliance (Fig.7). Push the battery until the uncoupling lever (8) locks into place.

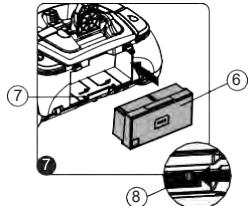


PREPARING TO WORK

Before beginning to work, it is necessary to:

 **ATTENTION:** before beginning the first work cycle , fully recharge the battery (read "RECHARGING THE BATTERY").


1. Before using the appliance, make sure it is in a good , safe working condition. If everything is not in order, the appliance must not be used.
2. Rotate the handlebar so it is vertical.

 **ATTENTION:** during this operation, do not rest your foot on the appliance.

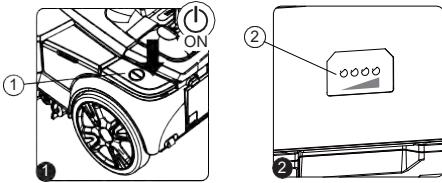

7. Remove the battery from the appliance using the handle moulded on it (Fig.5).
8. Make sure the condition of the squeegee rubbers is suitable for the work you want to carry out . If it isn't , perform the necessary maintenance (read "MAINTENANCE").
9. Make sure the condition of the brush is suitable for the work you want to carry out . If it isn't , perform the necessary maintenance(read " MAINTENANCE").
10. Rotate the front carter (5) as far as it will go - do this with the aid of the handle (6) (Fig.6).

 **ATTENTION:** these operations must be carried out using protective gloves to avoid any possible contact with the edges or tips of metal objects.

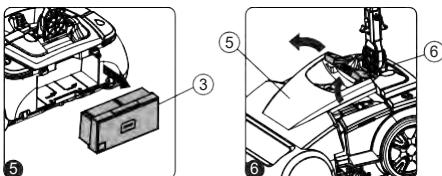

 **ATTENTION:** always use detergents whose manufacturer's label indicates their suitability for scrubbing machines. Do not use acid or alkaline products or solvents without this indication. Acid or alkaline maintenance detergents can be used, as long as they have pH values between four and ten, and do not contain oxidising agents, chlorine or bromine, fonnaldehyde, mineral solvents.


 **ATTENTION:** protective gloves should always be worn before handling detergents or acidic or alkaline solutions, to avoid serious injury to the hands.

 **ATTENTION:** always use low-foam detergent. To avoid the production of foam, put a minimum quantity of antifoam liquid in the recovery tank before starting to clean. Do not use pure acids.

3. Activate the appliance using the main switch (1) (Fig.1).


 **ATTENTION:** if the LED of the main switch (1) (Fig.1) is lit up, this means the electrical system of the appliance is activated.

4. Check the battery charge level. There are four LEDs (2) on the battery to show the charge percentage (Fig.2). If all the LEDs are lit up, the battery is fully charged; if they are all switched off, the battery is completely run down.
5. Deactivate the appliance using the main switch (1) (Fig.3).
6. Remove the power battery (3) from the appliance. To free the battery, shift the stop lever (4) in the direction of the arrow (Fig.4).

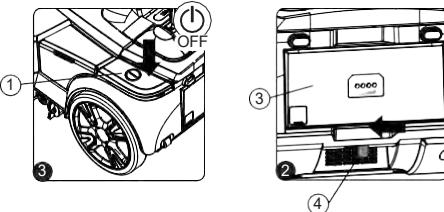

11. Remove the solution tank from the device (Fig.7). Carefully place it on the floor.
12. Remove the detergent solution filling cap (7) from its seat on the solution tank (Fig.8).
13. Fill with clean water, at a temperature no higher than 50°C and no lower than 10°C.
14. Add the liquid detergent to the solution tank in the concentration and manner indicated on the detergent manufacturer's label.




 **ATTENTION:** the formation of excess foam could damage the vacuum motor, so use only the minimum amount of detergent necessary.

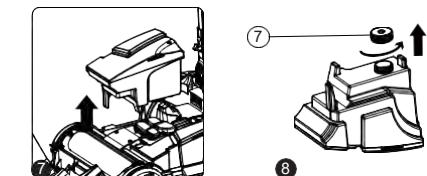

15. Replace the detergent solution filling cap (7) in its seat on the solution tank (Fig.9).

 **ATTENTION:** it is good practice to empty the recovery tank every time you top up the solution tank level.

16. Insert the solution tank in the device (Fig.10).
17. Rotate the front carter (5) as far as the work position - do this with the aid of the handle (6) (Fig.11).
18. Insert the battery in the battery-holder compartment in the rear part of the device.

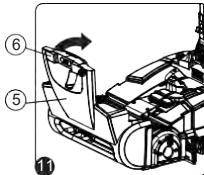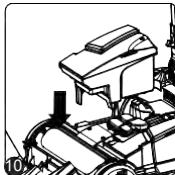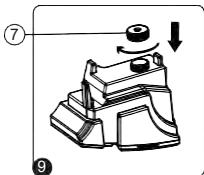

WORK

Before beginning to work, it is necessary to:

1. Carry out the operations described in the "PREPARING TO WORK" chapter.
2. Check that the squeegee body is in contact with the surface to be cleaned. If it isn't, turn the knob (1) in the direction of the arrow (Fig.1).

ATTENTION: Fig.1 shows the left side of the device. Rotate the knob on the right-hand side in the opposite direction .
3. Release the handlebar from its vertical position and rotate it towards you .

ATTENTION: during this operation, do not rest your foot on the appliance.
4. Adjust the control handlebar.

5. Activate the appliance using the main switch (2) (Fig.2).

ATTENTION: if the LED of the main switch (2) (Fig.2) is lit up, this means the electrical system of the appliance is activated.

ATTENTION: as soon as the device has been activated, the front LEDs will light up and both the brush motor and the vacuum motor will start working.

6. Activate the detergent solution supply by pressing the electric pump control switch (3) (Fig.3).

ATTENTION: if the LED of the electric pump control switch (3) (Fig.3) is active, this means the pump will supply detergent solution.

7. The appliance will now begin to work with full efficiency until the battery is flat or until the detergent solution runs out.




ATTENTION: the joint on the device guarantees greater manageability. To make a left-hand turn, rotate the handle to the left (Fig.4); rotate it to the right when you want to turn right.

ATTENTION: if you need to turn back while you are working, justrotate the device by 1800 by rotating thecontrolhandle.

ATTENTION: if you need to turn back while you are working, justrotate the device by 1800 by rotating thecontrolhandle.

ATTENTION: if the handlebar is placed in the idle position (vertical) during use, the brush motor and electric pump will stop working. After a few seconds, the vacuum motor will switch off as well.

ATTENTION: if the charge level reaches a certain value during use, the brush motor and the electric pump will stop working. After a few seconds, the vacuum motor will switch off automatically as well. Both the LED of the main switch and that of the electric pump control switch will remain ON.

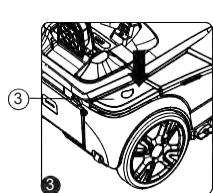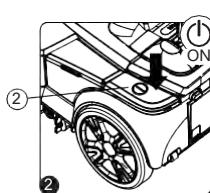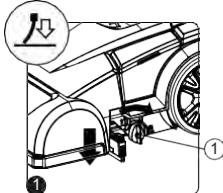


AT THE END OF THE WORK

At the end of the work, and before carrying out any type of maintenance, perform the following operations:

1. Deactivate the appliance using the main switch (1) (Fig.1).
2. Rotate the handlebar so it is vertical.

ATTENTION: during this operation, do not rest your foot on the appliance.


3. Raise the squeegee off the floor and rotate the knob (2) in the direction of the arrow (Fig.2).

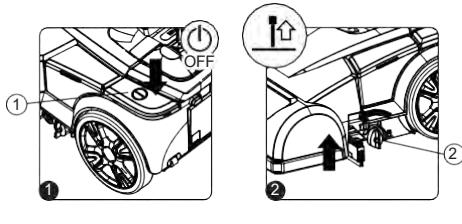

7. Rotate the front carter (5) as far as it will go - do this with the aid of the handle (6) (Fig.5).

ATTENTION: these operations must be carried out using protective gloves to avoid any possible contact with the edges or tips of metal objects.

8. Remove the recovery tank (7) from the appliance (Fig.6).
9. Remove the recovery tank cover (8) (Fig.7).

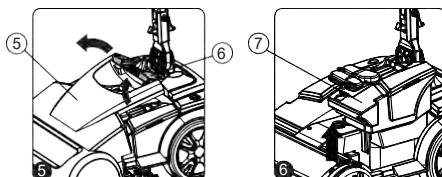


15. Remove the detergent solution filling cap (9) from its seat on the solution tank on (Fig.9).
16. Empty the tank.
17. Rinse the inside of the tank with a jet of water.
18. Replace the detergent solution filling cap (9) in its seat on the solution tank (Fig.10).

ATTENTION: Fig. 2 shows the left side of the device.
Rotate the knob on the right-hand side in the opposite direction.

4. Take the appliance to the dedicated waste water drainage area.


ATTENTION: The place given over to this operation must comply with current environment protection regulations.

5. Remove the power battery (3) from the appliance. To free the battery, shift the stop lever (4) in the direction of the arrow (Fig.3).
6. Remove the battery from the appliance using the handle moulded on it (Fig.4).




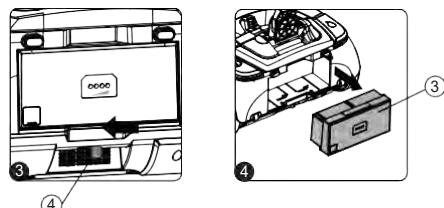


ATTENTION: protective gloves should always be worn before handling detergents or acidic or alkaline solutions, to avoid serious injury to the hands.

10. Empty the tank.
11. Rinse the inside of the tank with a jet of water. If necessary, use a spatula to remove the sludge that has accumulated at the bottom.
12. Position the recovery tank cover (8) on the tank.
13. Fix the cover on the tank.
14. Remove the solution tank from the device (Fig.8).

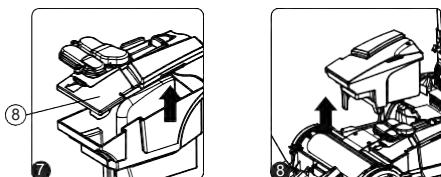

19. Insert the two tanks in the appliance, positioning first the solution tank and then the recovery tank.
20. Rotate the front carter (5) as far as the work position - do this with the aid of the handle (6) (Fig.11).
21. Block the handlebar in the horizontal position (Fig.12).

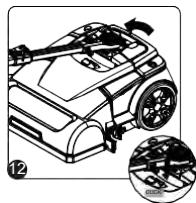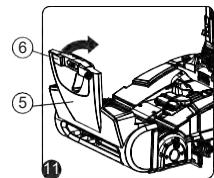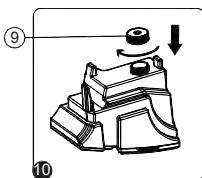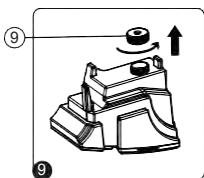




ATTENTION: during this operation, do not rest your foot on the appliance.

22. Rotate the stop lever of the command handlebar (13) in the direction of the arrow (Fig.13).
23. Close the command handlebar, pushing the handle (14) towards the main part of the appliance (Fig.14).
24. Rotate the stop lever of the command handlebar (13) in the direction of the arrow (Fig.15).

25. Take the appliance to the designated storage area.

26. Position the appliance with its rear part in contact with the floor (Fig.16)

ATTENTION: the joint on the device guarantees greater manageability. To make a left-hand turn, rotate the handle to the left (Fig.4); rotate it to the right when you want to turn right.

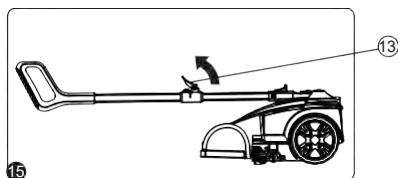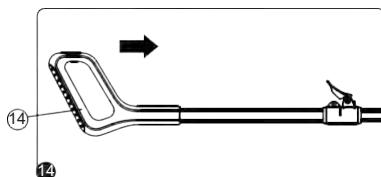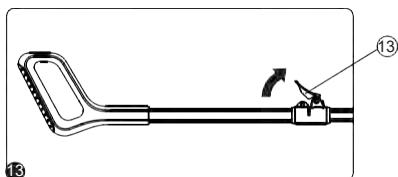

MAINTENANCE

At the end of the work, and before carrying out any type of maintenance, perform the following operations:

1. Deactivate the appliance using the main switch (1) (Fig.1).
2. Rotate the handlebar so it is vertical.







ATTENTION: during this operation, do not rest your foot on the appliance.

3. Take the device to the dedicated maintenance area.

ATTENTION: The place given over to this operation must comply with current environmental protection regulations.

4. Remove the power battery (2) from the appliance. To free the battery, shift the stop lever (3) in the direction of the arrow (Fig.2).
5. Remove the battery from the appliance using the handle moulded on it (Fig.3).
6. Rotate the front carter (4) as far as it will go - do this with the aid of the handle (5) (Fig.4).

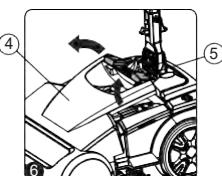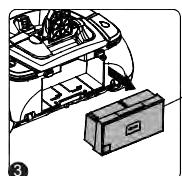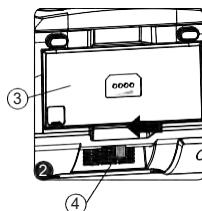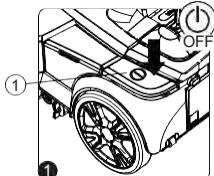




ATTENTION: these operations must be carried out using protective gloves to avoid any possible contact with the edges or tips of metal objects.

7. Remove the tunnel cover (6) and shift the stop levers (7) as indicated by the arrows (Fig.5)
8. Remove the brush (8) from the appliance (Fig.6).




ATTENTION: during this process, keep the control handlebar still, in order to prevent the appliance from moving accidentally.

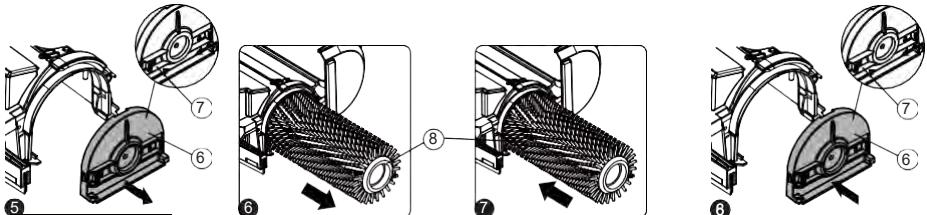

12. Remove the recovery tank (9) from the appliance.
13. Remove the recovery tank cover (10) (Fig.10).


9. Clean the brush under running water to remove any impurities present in the bristles. Check that the bristles are not worn; in the event of excessive wear, replace the brush (the bristles should be at least 10 mm long).

10. Fit the brush (8) on the pin in the brush motor (the brush can only be inserted in one direction) (Fig.7).
11. Replace the tunnel cover (6) and shift the stop levers (7) as indicated by the arrows (Fig.8).

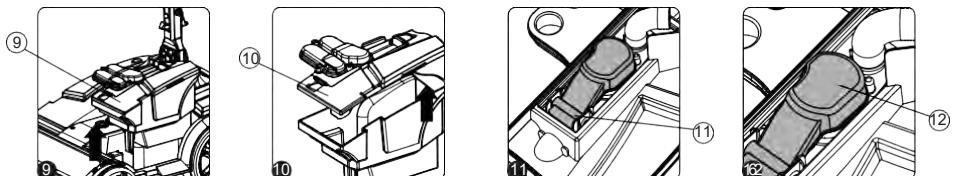





16. Clean the dirty water conveyor compartment with a jet of water; the entrance hole to this compartment is identified by the letter (A), while the outlet is identified with the letter (B) (Fig.13).
17. Clean the vacuum motor air conveyor compartment with a jet of air; the entrance hole to this compartment is identified by the letter (C), while the outlet is identified with the letter (D) (Fig.14).

18. Fix the cover on the recovery tank.
19. Remove the solution tank from the device (Fig.15).
20. Remove the filter cartridge (13) and clean it under a jet of water to remove any dirt that might be attached. If necessary, replace it (Fig.16).

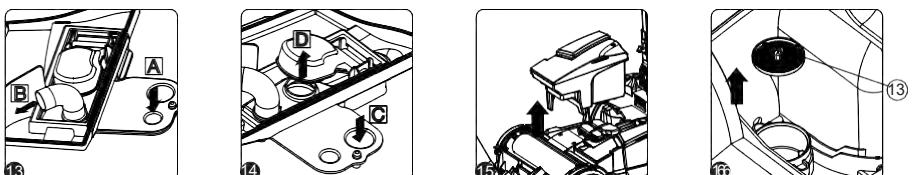





21. Remove the vacuum duct cleaning brush (14) from its support (Fig.17).
22. Clean the inside of the vacuum duct (15) with the brush (14) (Fig.18).

23. Replace the vacuum duct cleaning brush (15) on its support (Fig.19).
24. Rotate the front carter (4) as far as the work position - do this with the aid of the handle (5) (Fig.20).

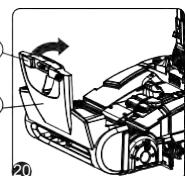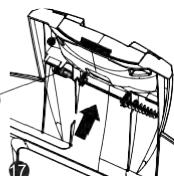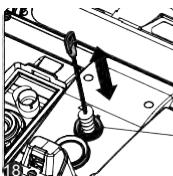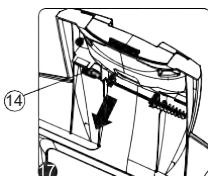

25. Block the handlebar in the horizontal position (Fig.21).

ATTENTION: during this operation, do not rest your foot on the appliance.

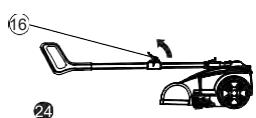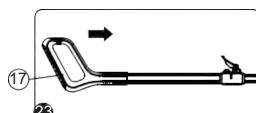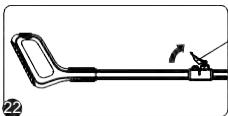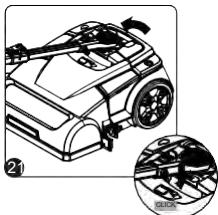

28. Rotate the stop lever of the command handlebar (16) in the direction of the arrow (Fig.24).




29. Position the appliance with its rear part in contact with the floor (Fig.25).

30. Make sure the squeegee is in the work position. If it isn't, rotate the knob (18) in the direction of the arrow (Fig.26).

26. Rotate the stop lever of the command handlebar (16) in the direction of the arrow (Fig.22).

27. Close the command handlebar, pushing the handle (17) towards the main part of the appliance(Fig.23).





ATTENTION: during this operation, do not rest your foot on the appliance.

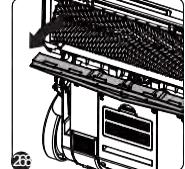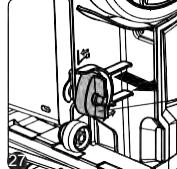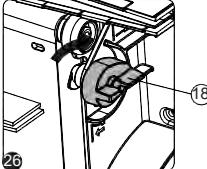

ATTENTION: carry out this operation for both the left-hand knob and the right-hand knob.

32. Use a damp cloth to thoroughly clean the vacuum chamber of the squeegee (19) (Fig.29).

ATTENTION: be careful not to lose or damage the seal (20) above the vacuum nozzle (Fig.29).

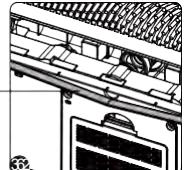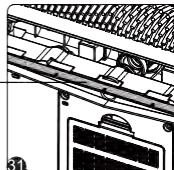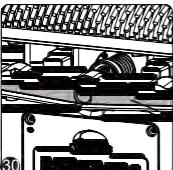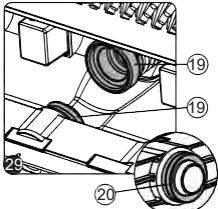



33. Use a damp cloth to thoroughly clean the vacuum chamber of the squeegee (21)(Fig.30).

34. Use a damp cloth to thoroughly clean the front rubber of the squeegee (22) (Fig.31). Check the condition of the front rubber blade; if the edge that is in contact with the floor is worn, replace it.

35. Use a damp cloth to thoroughly clean the rear rubber of the squeegee (23) (Fig.32). Check the condition of the rear rubber blade; if the edge that is in contact with the floor is worn, replace it.



Careful maintenance of the squeegee rubbers guarantees better cleaning and drying of the floor, as well as a longer vacuum motor life. To replace the squeegee rubbers, proceed as follows:

- Turn the wing nuts (24) that hold the squeegee by 90° (Fig.33).
- Remove the squeegee from the slots on the squeegee connector, taking care not to lose the seal on the vacuum nozzle (Fig.34).

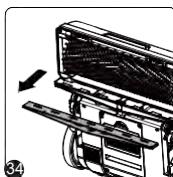
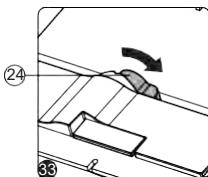


ATTENTION: Fig.37 shows the left side of the device. Rotate the knob on the right-hand side in the opposite direction.



38. Remove the exhaust air filter support (25) from the appliance by pressing the fixing tab (26) in the direction of the arrow (Fig.38).
39. Clean the filter cartridges (27) with a jet of air (Fig.39), from a distance of at least 20 cm.

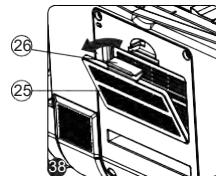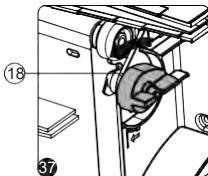

- Remove the worn filter cartridge (27) from the filter cartridge support (28) and replace it with the new one (Fig.41).
- Repeat the operations in reverse order to reassemble all the parts.

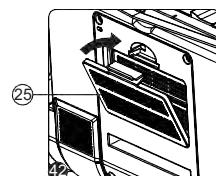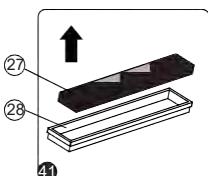



43. Rotate the front carter (4) as far as it will go - do this with the aid of the handle (5) (Fig.45).
44. Insert the two tanks and the detergent solution filter cartridge in the appliance, positioning first the detergent solution filter cartridge, then the solution tank, and finally the recovery tank.
45. Rotate the front carter (4) as far as the work position - do this with the aid of the handle (5) (Fig.46).

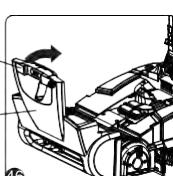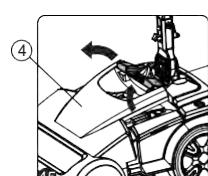

- Replace the worn/damaged rubber.
- Repeat the operations in reverse order to reassemble all the parts.


36. Bring the squeegee coupling to the idle position and shift the squeegee towards the appliance (Fig.35).

37. Fix the squeegee coupling in the idle position. Push the knob (18) towards the appliance (Fig.36), then rotate it in the direction of the arrow (Fig.38).

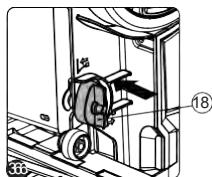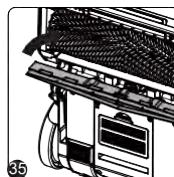



Careful maintenance of the exhaust air filters guarantees a longer vacuum motor life. To replace the filter cartridges, proceed as follows:

38. Remove the filter cartridge supports (28) from the filter support (Fig.40).

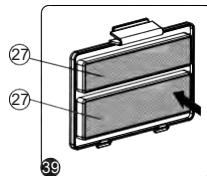

40. Insert the exhaust air filter support (25) in the appliance (Fig.42).
41. Rotate the appliance to its work position (Fig.43).

42. Block the handlebar in the vertical position; to release the handlebar, move the stop in the direction of the arrow (Fig.44).

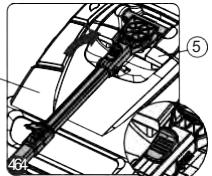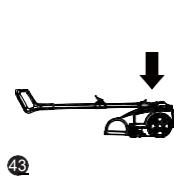

46. Insert the battery in the battery-holder compartment in the rear part of the appliance (Fig.47).

47. Position the appliance with its rear part in contact with the floor (Fig.48).

ATTENTION: Park the appliance in an enclosed place, on a flat surface; near the appliance there must be no objects that could either damage it, or be damaged through contact with it.

